


User's Manual

Ionizing Air Gun, type:

TOP GUN III

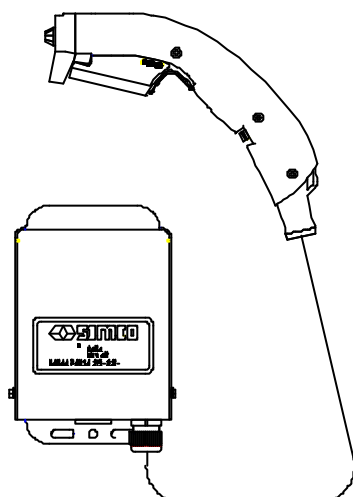

Ionizing Air Gun, type: Top Gun III

CONTENTS

| | Page |
|--------------------------------|------|
| 1. Introduction | 3 |
| 2. Safety | 3 |
| 3. Use and operations | 3 |
| 4. Technical specification | 3 |
| 5. Installation | 4 |
| 6. Putting into use | 5 |
| 7. Functional check | 5 |
| 8. Remote control installation | 5 |
| 9. Maintenance | 6 |
| 10. Faults | 7 |
| 11. Repair | 7 |
| 12. Spare parts | 7 |

Ionizing Air Gun, type: Top Gun III

1. Introduction

Read this manual completely before you install and put this product into use.

Follow the instructions set out in this manual to ensure proper operation of the product and to be able to invoke guarantee.

The guarantee terms are stated in the General Conditions for the Sale and Delivery of Products and/or Performance of Activities by Relstatic AG.

2. Safety

- Electrical installation and repairs shall be performed by a skilled electrical engineer.
- When carrying out work on the equipment: De-energise the equipment.
- If changes, adjustments, etc. have been made without prior consent in writing, or if no original parts have been used for repairs, CE approval for the equipment will be withdrawn and the equipment will no longer be under guarantee.
- Make sure that the equipment is properly earthed.
Earthing is needed to ensure proper operation and to avoid electrical shocks upon contact.

3. Use and operation

The Top Gun ionizing air gun allows you to simultaneously clean and neutralize electrostatically charged parts and to prevent the blown-away particles from being re-attracted.

The Top Gun produces an air flow which is rich in positive and negative ions. When this air flow is pointed to an electrostatically charged area, electrons are exchanged so that the area is neutralized and cleaned.

4. Technical specifications

| | |
|------------------|--|
| Mains voltage: | 230 V AC |
| Current: | 5 mA (standby), 50 mA (in operation) |
| Frequency: | 50/60 Hz |
| Connector: | IEC 320 |
| Pressure medium: | Air (or nitrogen) |
| Max. pressure | 7 bar (100 PSI) |
| Air connection: | 1/8 NPT female |
| Air consumption: | 68 l/min at 2 bar 130 l/min at 4 bar 210 l/min at 7 bar |
| Filter: | 0.01 micron |
| Noise level: | 76 dB at 2 bar 89 dB at 4 bar 97 dB at 7 bar noise level measured at 60 cm distance from the nozzle |

Ionizing Air Gun, type: Top Gun III

| | |
|------------------------|---|
| Ozone production: | < 0.001 ppm measured at 45 cm from the nozzle at a pressure of 1 bar |
| Ion balance: | 0 +/- 15 volts |
| Operating temperature: | 0 - 40°C |
| Operating conditions: | Light industrial |

5. Installation

5.1. Checks

- Check that the Top Gun is undamaged and that you have received the correct version.
- Check that the data on the packing slip corresponds with the data shown on the product received.

*If you have any problems and/or in the case of ambiguity:
please contact Relstatic AG.*

5.2. Mounting

5.2.1 Power unit mounting

Mount the power unit in the position you like against a wall or on/under a work table.

5.2.2 Gun holder mounting

Mount the gun holder in the position you like against a wall, on or at the side of the worktop or on the power unit. Use the holes at the top of the cover for mounting the holder on the power unit.

5.3. Compressed air connection



Warning:

**The compressed air must be clean, dry and free of oil.
The maximum permissible compressed air pressure is 7 bar (100 PSI).
Use an external filter and pressure regulator for this purpose.**

The compressed air is connected to the power unit via an 1/8" NPT female nipple. An adapter nipple (1/8 x 1/4 BSP) is included in the supply. Connect the compressed air via a flexible or rigid line. The line diameter depends on the air consumption. The minimum inside line diameter must be 4 mm.

5.4. Mains voltage connection



Warning:

**Make sure that the equipment is properly earthed.
The wall socket to be used must be easily accessible.**

1. Check that the mains voltage corresponds with the value shown on the rating plate.
2. Plug the connection lead into the connector of the power unit.
3. Insert the plug into an earthed wall socket.

Ionizing Air Gun, type: Top Gun III

6. Putting into use



Warning:

- **If the gun is used for a long period of time and/or frequently, it is recommended to wear ear protection.**

1. Point the gun to the object to be cleaned (distance: 5 to 30 cm).
2. Pull the trigger (LED lights up more brightly).



Attention:

- **If the Top Gun will not be used for a longer period: Remove the plug from the wall socket**

Blow-off power adjusent

The air supply can be adjusted using the screw in the grip.

Screw counterclockwise: blow-off power increases.

Screw clockwise: blow-off power decreases.

7. Functional check

The gun has a built-in LED with 2 light intensity levels. When the (mains) voltage is on, the LED will be dimly lit. After the gun has been put into operation, the LED will light up more brightly.

An electrostatic fieldmeter must be used to measure the efficiency of the Top Gun ionizing air gun. Measure the charge on the object before and after the Top Gun has been used for the blowing-off job.

The charge measured should have disappeared afterwards.

8. Remote control installation



Warning:

When carrying out work on the equipment: De-energise the equipment.

Electrical installation and repairs shall be performed by a skilled electrical engineer.

Summary

The power unit can be equipped with the switch (relay) for remote control (not wireless). The voltage on this circuit is 100 V DC. The power unit is switched on by making the contacts.

Installation

1. Remove the 2 screws from the side and open the box.
2. Remove the press-out plate beside the IEC connector.
3. Fit a gland and feed the wiring through it.
4. Connect the flat-pin plugs to the wiring.
5. Fit the flat-pin plugs on tabs J4 and J5.
6. Close the box and fit the 2 screws into the side.

Ionizing Air Gun, type: Top Gun III

Attention:

The LED in the gun indicates “standby” (The Led will be dimly lit) if the remote control is used.

9. Maintenance

Warning:

When carrying out work on the equipment: De-energise the equipment.

9.1. Emitter point

The emitter point must be clean and sharp.

Regularly clean the emitter point with a cotton tip or a soft cloth, slightly soaked in alcohol.

Make sure that:


- no lint remains on the emitter point.
- the point is entirely dry before switching on the Top Gun again.

9.2. Replacing the filter nozzle

The filter turns red as a result of fouling. Replace the filter nozzle when it is discoloured.

1. De-energise the Top Gun.
2. Disconnect the compressed air supply.
3. Remove the filter nozzle.

For this purpose, insert a screwdriver between the filter nozzle and the locking ring. Push the filter nozzle forwards (see sketch).

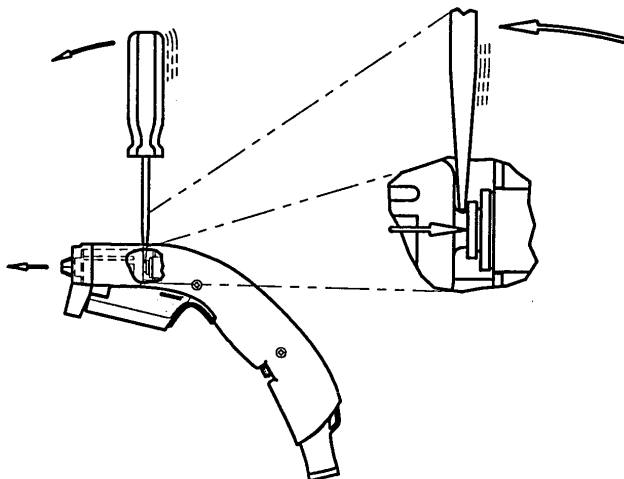

4. Fit a new filter and press it into place.

Ionizing Air Gun, type: Top Gun III

10. Faults

| Problem | Cause | Remedy |
|---|-----------------------|-------------------------------|
| Gun is not blowing | No (mains) voltage | Restore (mains) voltage |
| | No compressed air | Restore compressed air supply |
| | Filter nozzle clogged | Replace filter nozzle |
| No ionisation (LED in gun does not light up) | No (mains) voltage | Restore (mains) voltage |
| | Defective power unit | Repair the power unit |

table 1 Top Gun faults

11. Repair / Calibration



Warning:

Repairs shall be made by a skilled electrical engineer.

When opening the power unit, you may touch parts under hazardous voltage. We recommend you to return the complete installation (gun + power unit) if there is a need for repair and/or calibration.

Pack them properly and clearly state the reason for return.

12. Spare parts

| | |
|---------------|--|
| 65.07.50.9010 | Filter nozzle kit (2 off) |
| 65.07.50.9050 | Gun hanger |
| 65.07.50.0010 | Gun with 3 m. of cable/hose |
| 65.07.50.0020 | Gun with 6 m. of cable/hose |
| 65.07.90.1020 | HV transformer - 230 V |
| 65.07.50.1520 | Printed circuit board for power unit - 230 V |
| 65.07.90.2020 | Air valve - 230 V |